


Instructions For Use

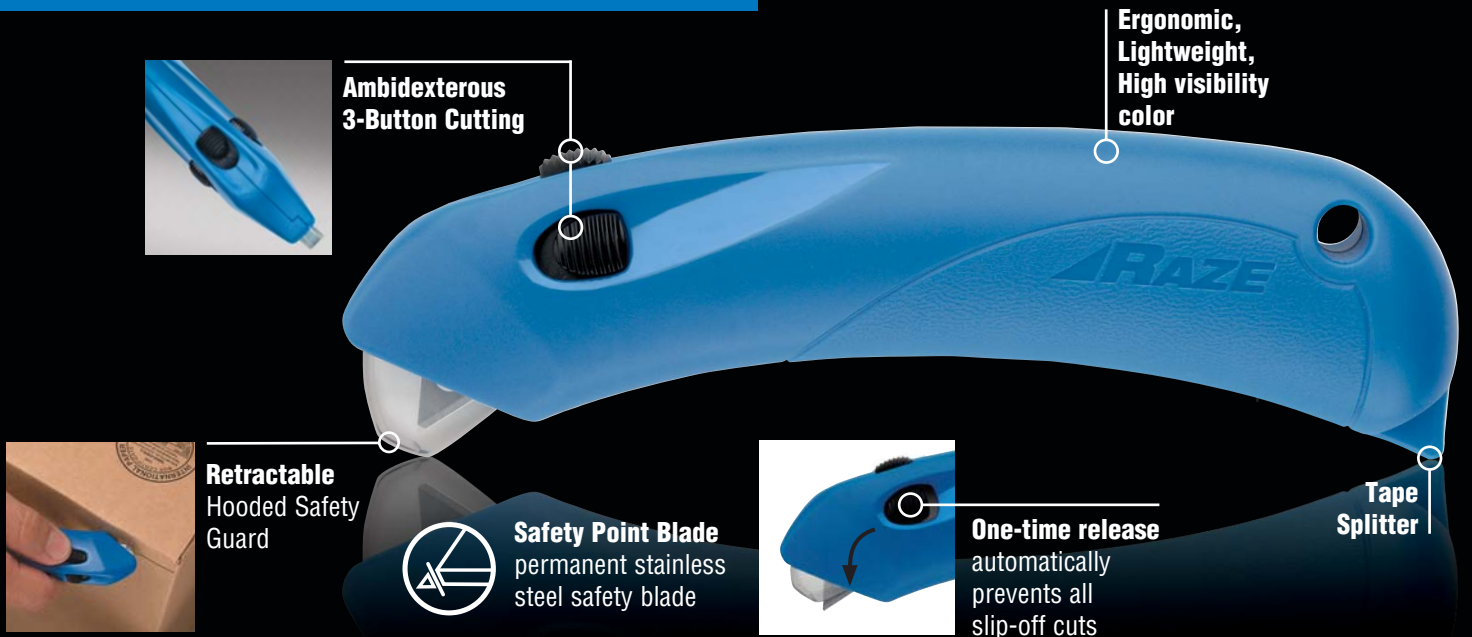

RSC-432 Disposable Safety Cutter

Safety Guard Release



In Locked Position the blade is covered



Push Release Button forward allowing guard to retract and expose the blade



After the cut the blade guard relocks automatically, preventing slip off cuts, even while button is engaged.

Proper Cutting Techniques



Push Release Button forward allowing guard to retract and expose the blade.



Press blade firmly into cutting surface to start the cut. Place opposite hand out of the path of a cut line.



Continue your cut, letting friction of box maintain blade exposure. Blade guard will automatically relock at the end of the cut.



Blade-less Tape Splitting eliminates all cut injuries.

For Information Call: (800) 229-2233
Email: info@go-phc.com
[www.go-phc.com / rsc432](http://www.go-phc.com/rsc432)



Working Safe Everyday.™