


SPEEDAIRE 4ZK19A INTERMEDIATE AUTOMATIC FILTER DRAIN INSTALLATION INSTRUCTIONS

for
**4ZK87A, 4ZK89A, 4ZK91A, 4ZK92A, 4ZK93A, 4ZL32A, 4ZL34A,
4ZL36A, 4ZL38A, 4ZL40A & 4ZL42A** Intermediate
Polycarbonate (with Guard) General Purpose Air Line Filter,
Filter/Regulator & Oil Removal (Coalescing) Filters

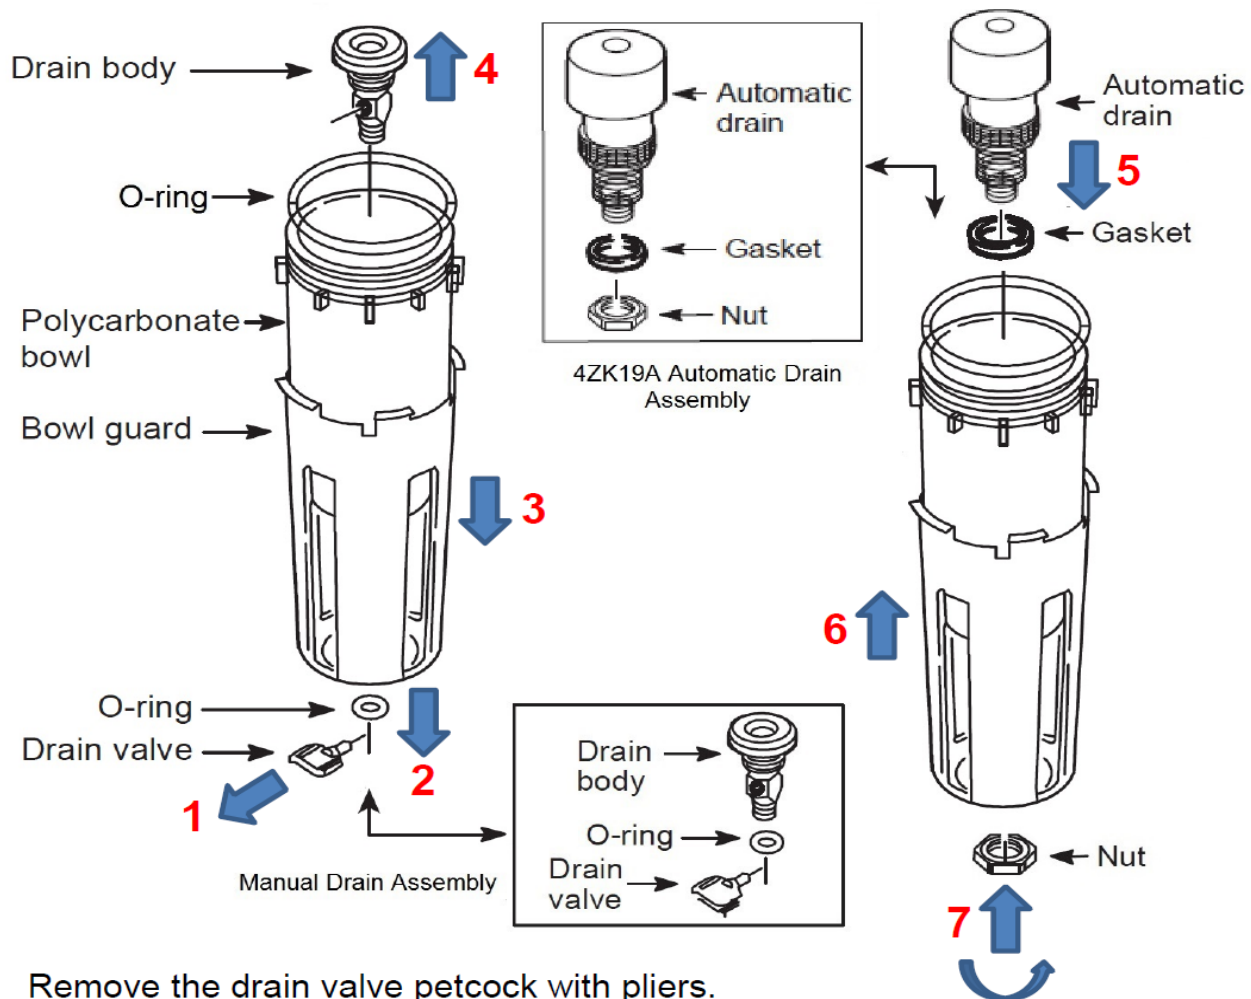

1. Remove the drain valve petcock with pliers.
2. Remove the O-ring from the drain stem with a screwdriver.
3. Separate the bowl guard from the polycarbonate bowl.
4. Lift the manual drain body up until it is completely out of the polycarbonate bowl.
5. Place the automatic drain body with gasket into the polycarbonate bowl and push it through until the threads are exposed out the bottom of the bowl.
6. Reassemble the bowl guard over the polycarbonate bowl.
7. Install the automatic drain nut. Tighten the nut until snug (do not over-tighten).