


INSTRUCTION

The key box is on the unlocked status without batteries installed when you open the packing. You can start from Step 2 for programming . If it is locked ,please follow the Step 1.

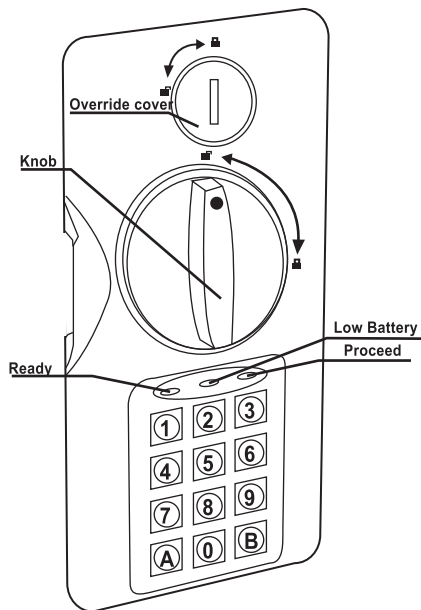

① Open your key box with your override key:

Insert override key into the lock and turn it counter clockwise one quarter to the unlocked position. Turn the knob counter clockwise one quarter to the unlocked position .

② Installing batteries :

Slide the cover off the battery compartment .Properly load the batteries with correct direction, Replace cover. Return the override key and the knob to the locked position .


③ Programming your personal code :

Press the red button at the bottom edge of battery compartment back of the door .At the same time the yellow light will be on , enter your code (1-8digitals) in 30 seconds then press A or B to finish .

The yellow light keeps on flashing with beeps if the incorrect code is entered and the key box will not be opened . If an incorrect code is entered 3 times in a row ,the electronic system will automatically shut down for 20 seconds before it can be worked again to be enter the correct code , Next 3 times incorrect code row , the electronic system will hold 5 minutes before the new code enter. During this delay . the override key can be use to open the key box .



- DO NOT FORCE THE KNOB .
If forced , the knob will be broken and you key box will be damaged ,
The knob will be turned easily into position when operated correctly .
- IMMEDIATELY SET YOUR
OWN PERSONAL COMBAINATION CODE
- DON'T FORGET THE OVERRIDE KEY IN THE
KEY BOX , KEEP IT AWAY FROM THE KEY BOX .

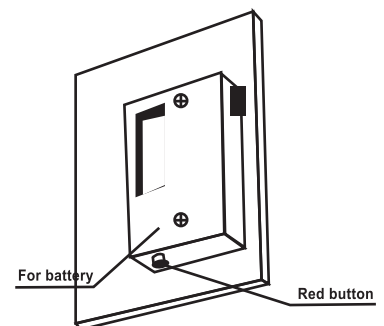

YOUR KEY BOX INCLUDES:

- Numbered key tag accordingly
- 6 out key tags and key number index
- 2 override keys
- Override lock cover

④ Opening the key box with personal code :

Enter the personal code on the keypad. The green light will be on which means ready and stay green for 5 seconds. Turn the knob from the locked position to the unlocked position while the green light flashing and open the door .

⑤ Closing your key box :

Make sure the knob and override key are turned in the locked position .

⑥ Please purchase 4 AA batteries additionally

★**Attention:** Red light on means "Low Battery" when you are entering with correct code . To change the battery and re-set your personal code .You should use override key to open the door if there is no light from the LED .