

Prep the RG6 with the 45-520

Tool directions

- ▶ With a properly adjusted 45-526 cable prep tool, squeeze handles and open the jaw.
- ▶ Insert the coax into the tool in the direction of the coax icon on the tool. Coax should be flush with the end wall of the tool.
- ▶ Rotate tool clockwise 5-8 times around cable. You will hear the blades cutting through the different coax layers. When the cutting sound fades, stop rotating the tool.
- ▶ Squeeze handles, open tool.
- ▶ Pull cable from tool.
- ▶ Remove slugs if necessary.



- ▶ Adjustable depth and fixed width blades.
- ▶ Slider adjusts for 6/59/58(plenum) coax.
- ▶ Replaceable blades – accepts other cartridges
- ▶ Provides standard $\frac{1}{4}'' \times \frac{1}{4}'' \times \frac{1}{4}''$ prep.

TIP

While spinning tool, hold coax near the tool side to prevent the tool from "walking" or wobbling, which leads to an uneven or spiraling cut.

45-520 Adjustable Coax Prep Tool

©2014 IDEAL INDUSTRIES, INC.

