



31-541

Volt-Guard™ Field Eyelet Repair Kit Instructions

Fish Tape Preparation

Proper preparation and stripping of Volt-Guard™ fish tape is critical to the strength of the eye-to-tape connection.


1. Cut back damaged end with Side-Cutting Pliers 30-430, 35-430, 35-013 or 35-012.




2. Strip outer orange nylon jacket exposing inner fiberglass. Use 45-895 Strimaster® Wire Stripper with LB-1156 blade. Or, safely strip away nylon with razor blade.
3. Pulling eye strip length to be 3/4".

Gluing Eyelet

1. Apply industrial adhesive (supplied with kit) to stripped end.

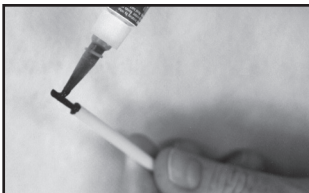

2. Insert stripped end into eye. Fish tape must bottom-out in eye, and fiberglass end must extend completely to the edge of eye hole.

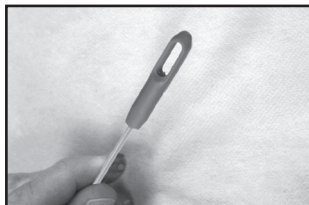

Allow adhesive to cure for 24 hours before use.

IDEAL INDUSTRIES, INC.

Sycamore, IL 60178, U.S.A.

800-304-3578 Customer Assistance

www.idealindustries.com

ND 7190-2

Made in U.S.A. of US and global components.