


Mounting Instructions

11106/11200

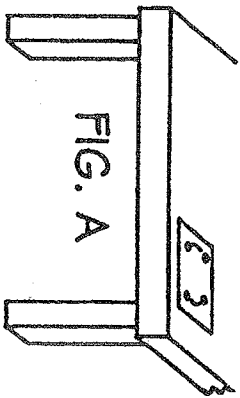

1. Position bottom of template parallel to $8\ 3/8$ " from the edge of bench, as desired. (Fig. A)
2. With template as flat as possible, mark the leg centerlines using a punch type tool.
3. Remove template, drill thru marks $21/32$ " for $5/8$ " bolts.
4. Mount as shown in Fig. B

STANDARD HARDWARE

- (4) $7/16$ " X $3\ 3/4$ " (min. length) ANS BOLTS
LENGTH MAY VARY PER BENCH
- (4) $7/16$ " ANS TYPE B PLAIN WASHERS
- (4) $7/16$ " ANS HELICAL SPRING WASHERS
- (4) $7/16$ " ANS NUTS

Edge of Bench

