


Insert the adapter into the top hole of the cone. Insert the sign holder into the adapter by aligning the engagement points of both items. Turn the sign holder and adapter approximately 1/4 turn clockwise to lock the assembly into position.



Insert the sign board into the sign holder to the bottom of the holder.

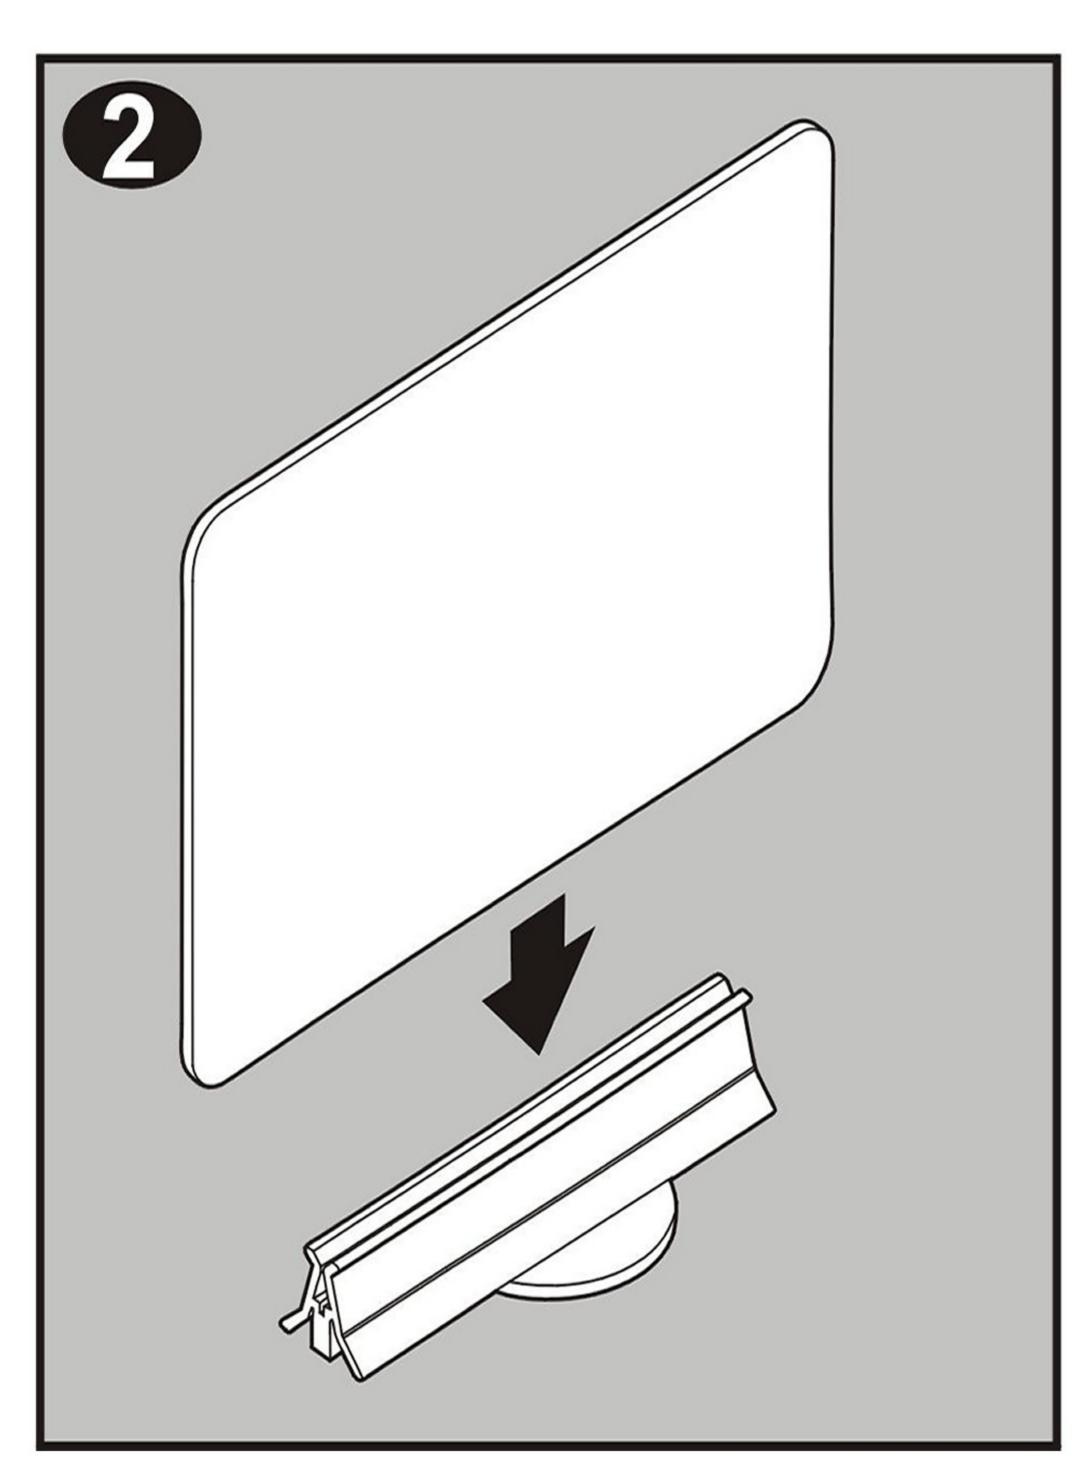