



# INSTALLATION INSTRUCTIONS


## VF14/AF14 VAFT



VF14



AF14

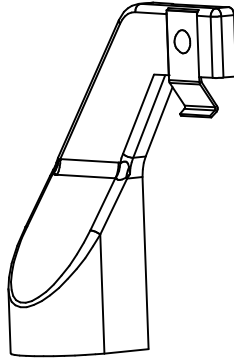

VAFT



MODEL NUMBER	DESCRIPTION	MAX. RECOM. LOAD LBS.
VF14	C-PURLIN VERTICAL FLANGE CLIP	160
AF14	Z-PURLIN ANGLE FLANGE CLIP	100

### FEATURES

1. EASILY INSTALLS FROM FLOOR WITH INSTALLATION TOOL (VAFT).
2. NO SCAFFOLDING REQUIRED.
3. SUPPORTS WIRE OR ROD FROM BAR JOIST (VF14) OR Z-PURLIN (AF14).
4. ONE FASTENER FITS FLANGES 1/16" TO 1/4".
5. NEW DESIGN FOR INCREASED APPLICATIONS.
6. MADE FROM LIGHTWEIGHT HIGH IMPACT PLASTIC TO INCREASE DURABILITY.

### HEIGHT ADJUSTMENT FOR VAFT:

1. TO OBTAIN DESIRED INSTALLATION HEIGHT USE 1/2" RIGID CONDUIT.
2. SCREW THREADED END OF CONDUIT INTO BASE OF INSTALLATION TOOL (VAFT).
3. CUT TO DESIRED LENGTH.

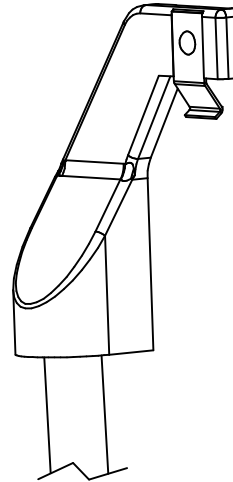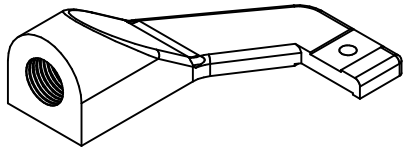

#### WARNING:

1. Caddy® Fasteners that are manufactured using spring steel components may be used only in a non-corrosive indoor environment. Only non-spring steel fasteners that have protective coatings may be used otherwise, as specified.
2. Fasteners must be used only in the manner depicted in the illustrations that accompany it and must not exceed static load ratings noted.
3. Fasteners are designed for use with a variety of industry standard building materials, structural shapes, and mechanical components. For the fastener to work properly, these items must meet the appropriate industry standards. (Examples: ANSI, AISC, AISI)
4. The buyer and/or installer is responsible for:
  - a. Application in conformance to local codes.
  - b. The integrity of structures to which the fasteners is attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified engineer.
  - c. Using appropriate industry standard hardware as noted above.
5. Failure to observe these specifications may cause product malfunction resulting in property damage or bodily injury. ERICO Products at the time of shipment are warranted to conform to any applicable written description furnished to the Buyer by ERICO, and to be free from defects in material and workmanship. NO OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS), SHALL EXIST IN CONNECTION WITH THE SALE OR USE OF ANY ERICO PRODUCT.

**SAFETY INSTRUCTIONS:** All safety regulations required by the job site must be observed. Special attention should be given to the following instructions. While working or on the job site:

1. Observe all Federal and local safety regulations.
2. Wear safety glasses with side shields.
3. Be aware of personnel working above and below.
4. Wear a hard hat.
5. Wear gloves to avoid splinters and cuts.
6. When working above ground level, be sure the structure will support your weight.





TECHNICAL SUPPORT PHONE:  
(800) 25-CADDY  
(1-800-252-2339)  
www.ericco.com

CFS329A


© 2002 ERICO, INC. PRINTED IN U.S.A.

**ERICO®**

# INSTALLATION INSTRUCTIONS

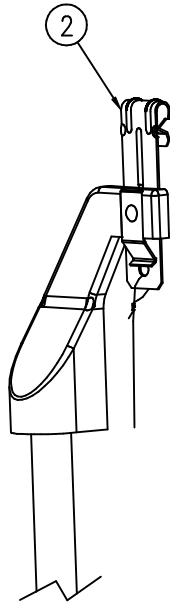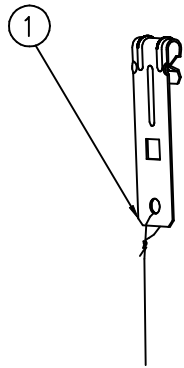


1. TIE WIRE TO CLIP.
2. INSTALL CLIP TO INSTALLATION TOOL.
3. RAISE TOOL AND FASTENER ASSEMBLY ABOVE FLANGE. PLACE FASTENER AGAINST FLANGE AND PULL STRAIGHT DOWN. ENGAGING FASTENER TO FLANGE.
4. TO DISENGAGE TOOL, LIFT UP AFTER FASTENER HAS BEEN ENGAGED.

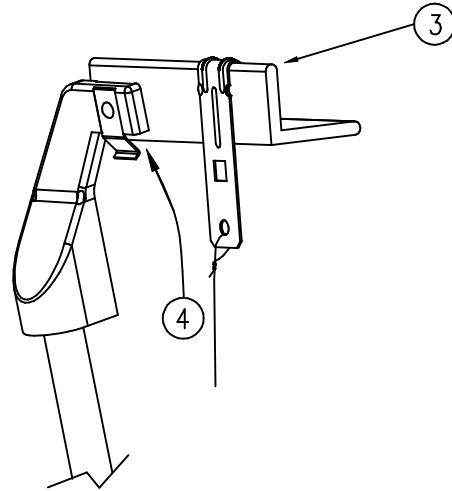


SEE CATALOG FOR OTHER APPLICATIONS.


CAN BE USED WITH PRE-ASSEMBLED COMBINATIONS:

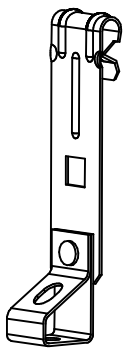


THREADED ROD



PLAIN ROD

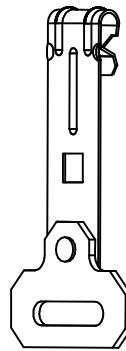

STRAP HANGERS

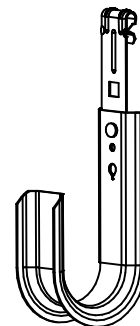

J-HOOKS



TECHNICAL SUPPORT PHONE:  
(800) 25-CADDY  
(1-800-252-2339)  
[www.erico.com](http://www.erico.com)

CFS329A

© 2002 ERICO, INC. PRINTED IN U.S.A.

**ERICO®**